

# Solo Compression Sprayers

454, 456, 456 SW, 456 HD, 457 HD, 454 V, 456 V, 457 V, 407 CI

## AgSafe Safe Work Practices

1. Before placing chemicals in the sprayer fill with fresh water, to be sure that you have everything assembled correctly. Also so that you can practice spraying and adjust the pressure without any risk. When familiar with the sprayer, follow the normal operating procedures.
2. To remove pump turn the handle counter clockwise.
3. Fill tank with premixed formula up to the desired level (do not exceed maximum fill mark). Read recommendations from the chemical manufacturer.
4. To seal correctly tighten cap and pump assembly.
5. Do not exceed a maximum of 45 psi or 3 bar pressure. If 45 psi is exceeded the valve stem on the pressure relief valve will rise up to vent excess pressure over 45 psi.
6. Start or stop spraying by squeezing or releasing the lever on the shut off valve. Spray pressure can be monitored with an optional pressure gauge.
7. Prior to removing the pump, release the pressure first by pulling up on the pressure relief valve stem.

Please use the following **Safe Work Procedures** as a guideline to building your own safe work procedures.